
# **COLORSTAGE MINI GLADIATOR**

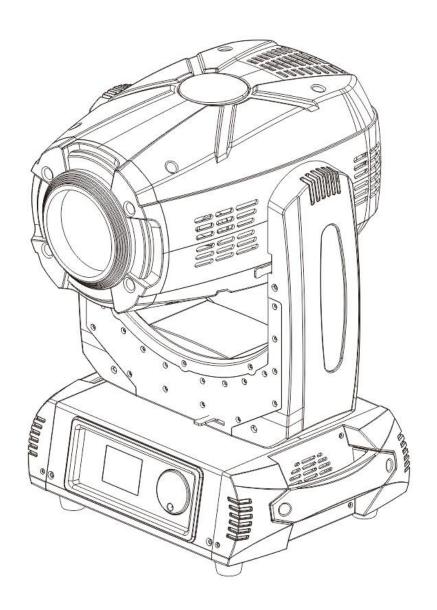

Weight: 13KG

Power: 230W

## **ITEM**

Item	02
1.Product introduce	03
2.Fixture size	03
3.Parts introduce	05
4.Safety information	05
5.Packing and shipping	07
6.AC power	07
7.Lamp model and replace	07
8.Control Panel	08
9.Control panel operate	08
10.DMX Channels	13

#### **STATEMENT**

The product is good packing when ship out the factory. All users should strictly abide by the warnings and instructions stated in this manual, any damage and results due to misuse and the neglect of this operating manual will be excluded from the deal responsibility this manual will not informed in additionally if have technical changes.


#### PRODUCTION INTRODUCE

Thank you for choose this Mini HOT BEAM products, this model is the moving head light which is the latest development of the smart, efficient products, beautiful shape, smooth R & D, combined with the advanced technology of today's stage lighting products with international advanced electronic control technology and excellent user-friendly industrial design , fully comply with CE standard, accepted international standard DMX512 signal mode.\*

This moving head lights, use ceramic luminescent film reflector as a condenser system, coupled with the high-quality optical lens components, broadband voltage, a clear pattern, sharp and uniform output light efficiency. Intelligent LCD display module, the English language selection mode, intuitive operating menu, shortcut.


Mini Hot Beam , have 16/24 international standard DMX512 channels optional Horizontal scan:  $540\,^\circ$  vertical scanning  $270\,^\circ$  (16bit precision scanning) electronic correction, dot-matrix display, four touch switch LCD + single-Key flying shuttle can spin. The can be inverted  $180\,^\circ$ , the color wheel is combined with white and 14 colors. 2 Gobo wheels: 9 patterns + white effect round by 8 prism+ 6 prism and atomization function. 0-100% mechanical dimmer, support mechanical strobe and variable strobe effect, strobe macro function. The optical system of the lens group electric focusing, the beam angle of 0 to  $4\,^\circ$  with overheating protection function

Moving head lights are widely used in television, disco, dance halls, nightclubs, large-scale performances and other professional venue

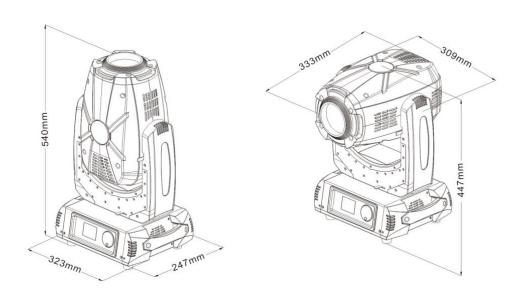


#### 2 FIXTURE SIZE


Size:  $342 (L) \times 246 (W) \times 447 (H)$ 

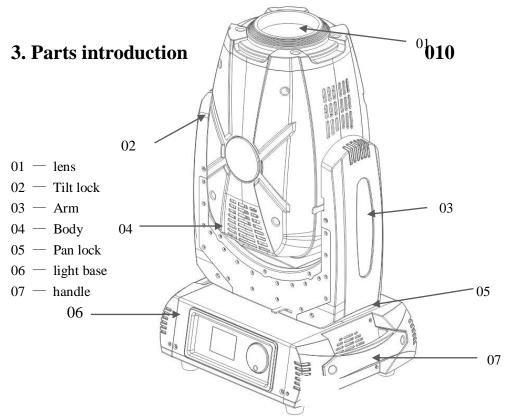



02 — control wheel

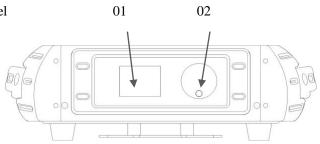

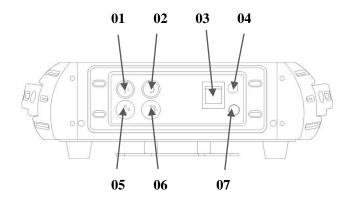

01 — 3 Pin dmx In

02 — 5 Pin dmx in

03 — Power switch

04 — Power in

05 — 3 Pin dmx out

06 — 5 pin dmx out

07 — Fuse

#### 4. SAFETY INFORMATION

Safety warning message

This product is only suitable for professional use, and does not apply to security for other purposes. After you got the lights, please check the package whether have any damage caused by transportation. If there is any damage, do not use this fixture, and please contact the dealer or manufacturer as soon as possible.

This product is only suitable for indoor, IP20 protection class. Lamps should be kept dry to avoid Moisture, overheating or dusty environment. Prevent lamps come into contact with water or any other liquid.

The use of this product should pay attention to: fire, heat, electric shock, ultraviolet radiation, the lamp to explode or

Shedding caused serious or fatal injury.

Need to read the instructions before use energized or installing.

Follow through the operation of security methods and pay attention to the warn specification and equipment. If you have any problem for how to safely operate Please contact your dealer



Please don't use the equipment if the temperature above 40°C

# **4.2 BURST PREVENTION**

The lens should be changed if had damaged or any problems. Don't change the non-original manufacturer lens.

## 4.3 TO PREVENT E WOUNDING

Please don't move the package by one person only.

When Hang the fixture, please must verify that the facilities to be able to withstand the weight of the lamps at least 10 times more.

Please make sure the Mounting hardware is strong enough no any damage, and insurance for the safety rope as auxiliary security fixed in other facilities will need to verify before installation. Installing or removing the equipment, to make the pulley below the work location

#### 4.4 UA PROTECTION AND THE BULB EXPLOSION

Prohibit straight viewpoint with exposed bulbs to avoid UV damage to the eyes; Do not use the equipment without the lens screen and the lid;

The lens and the light head covers should be timely replaced if any damage to rupture The Fixture should be used with the protection screen together.

# 4.5 PREVENTION OF ELECTIC SHOC

The electrical connection must only be carried out with corresponding qualifications; Before installing, make sure you use the power voltage lamps must comply with the identified power, voltage and have an overload or leakage protection;

Each lamp must be properly grounded, installed in accordance with the relevant standards; ( Cut off the power when stall or replace the lamp and the fuse;



Prohibit the use of a lightning storm or wet environment.

### 4.6 TO PREVENT BURNING OR FIRE



- 1. The fixture can be mounted directly on the surface of ordinary combustible material.
- 2. Do not short-circuit temperature protection switch or fuse, use the specified type of fuse.
- 3. The equipment must be installed away from inflammable and explosive materials.
- 4. The equipment should be projected range of 3 meters away objects and projectiles temperature less than 60 ° C; ---- 3.0m.
- 5. Fan or ventilation, at least in the range of 0.5 meters can not be an obstacle.
- 6. Do not place any object on the lens.



- 7. Handling at least allow the device to cool for 20 minutes.
- 8. Do not replace the non-original parts.

#### **4.7** TRANSPORT PROTECT LOCK

In order to protect the light, there is a protect lock; During the transport, the lock will closed keeping the item in safety state.

#### **4.8** ABOUT PACKING

- 1. Before packed, make sure power is off, and wait for at least 20mins for cooling down.
- 2. Before clean the fixture, make sure X, Y axis protect lock closed.
- 3. After packed by plastic bag, high-lift the fixture with two handles besides the product. put the product into the fly-case up-side-down.
- 4. After packed the product, put the accessory into the accessory case, then closed and lock the fly-case.
- 5. Fly-case only up stacked two layers. Prohibited upside down
- 6. When packed with carton box, equipment should be put into the foam first, then set into a carton, pay attention to the vertical position.

#### **4.9 UNPACKING**

Note: Before unpacking check the damage is whether due to the transportation or not, if you find any such damage, please do not use this item, and contact with the dealer or manufacturer as soon as possible.

- 1. Open the fly-case, and discover the inside plastic bag.
- 2. High-lift the product by two handles beside the bottom base and move it out.
- 3. Before power on, make sure you have opened the X, Y axis lock!



Attention! One product only can accept one input one output.

Mini Hot BEAM DMX cable include 3 contact pins:

Pin 1, FOR GROUND; Pin 2 connected to the negative polarity signal; The pin 3connected to the positive polarity signal.

DMX512 cable must use the professional shielded twisted pair cable; standard loudspeaker cable is not reliable to control the long-range data. 24AWG cable is suitable for more than 200 meters long-distance signal transmission and must add\ DMX 512 signal amplifier.

Do not use two outputs to separate the connection, if separate a continuous connection to branch, DMX512 splitter is necessary.



Attention! Do not overload the connection. One continuous connection can only connect up to 32 devices.

If use the DMX512 splitter. At first connect DMX512 Splitter input terminal to controller .And then connected from the splitter output terminal to next device. Do as above guide to connect other device, and finally coupled with terminal insertion

#### **5.PACKAGE**

Mini Hotbeam packed with fly-case of two in one ,or carton box. Attach follow accessory.

#### **ACCESSORY**

CONTENT	QUANTITY
USER MANUL	1
SIGNAL CABLE	1
Clamp (option)	2

#### 6. AC POWER

#### VOLTAGE, POWER, FUSE SPECIFICATION

Input Voltage	Total Power	Frequency
110~240V	230W	50/60HZ

#### **6.1 POWER PROTECT**

The equipment must be operated by professionals; Make sure that the voltage of power supply must be comply with the voltage identified on the lamp, and must have an overload or leakage electrical protection.

#### **ATTENTION!**



Factory has equipped the standard 3 pin plug socket. Connect the power supply as below table.

If lamp cable is damaged, replacement should be operate by factory or qualified staff. Any question, please contact professionals or talk to a qualified electrician.

Live wire(L)	Null(N)	Ground wire
RED	BLUE	Yellow +Green



#### 7. LAMP

#### 7.1 LAMP DESCRIPTION

LAMP MODEL	POWER OF LAMP	LIFE/HOUR	COLOR TEMPERATURE
YODN MSD 150 R3	150 W	4000 HOURS	8500K




WARNING! There is a safety hazard or damage if install similar bulb To reduce the risk of damage to light ,do change the lamp before using time over 125% of lamp life .

#### LAMP REPLACE

Attention! When replace the lamp is forbidden to touch lamp with bare hand, to avoid the greasy dirt stains filament. filament must be kept clean



1. Disconnect the power. Before replace lamp, fixture need 20 minutes for lamp cooling. Fasten the head with Y axis protect lock in  $60^{\circ}$  position.





2. After open the cover, you can see the lamp inside, please wait the lamp be cool after used but not touch it in hot status. (picture 2)



(2)

3. One hand press the lamp holder, another hand hold the lamp, and pull out the wires (picture 3,4)





(1

4.after take apart the lamp, please check the inside glasses, clear it will make the light better effect.(Picture 5)

(3)




5.installed the lamp after replaced.


## 8.COLOR WHEEL, GOBO WHEEL



### **Fixed Gobo**

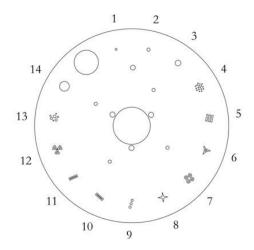

#### **Rotation Gobo**

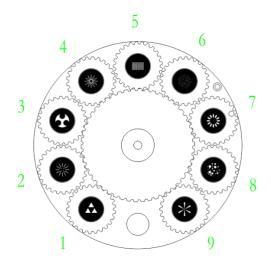

MINI HOT BEAM Have 6 linear prism and 8 facet prism. With Focus . Rotation . Zoom . Shaking . Rotation speed changeable

## 8. Contorl panel



Display: to display all information of fixture.

Control wheel: can turn right, left and enter.

turn left : date increase

turn right: date decrease

Press function : enter

## 9.CONTROL PANEL MENU OPERATE

Main Menu	Submenu 1	Submenu 2	<b>Function SET</b>	<b>Function description</b>
DMX Address			001-512	DMX Address number set
	"Cl D "		"Natu"	Normal
	"ShowReve"		"Revl"	reverse 180°
	"T an arra a a "		"Chin"	Chinese 中文
	"Language"		"English"	English
	"BrigSett"		000-255	Brightness set
				Backlight close after delay
	"Backligh"		"60S "	60S
Display			"Ligh"	Backlight light always
Display				Menu back to mainmenu
	MenuBack"	MenuBack"	90S	after dalay 90S
			"Off "	Menu back not automatic
				Backlight blinking when no
	Backflah		open	dmx
	Dackitan			Backlight not blinking when
			off	no dmx
	"Return "		<b>A</b>	return

		"Xreverse"	"Off "	PAN SCAN Normal
	"XY Setup"		"Open"	Pan Scan Reverse
"Feature "		113.7	"Off "	Tilt Scan normal
		"Yreverse"	"Open"	Tilt Scan Reverse
	"XY Speed"	"Fast"	PAN/TILT FAST	

		]		SPEED
				PAN/TILT
			"NORM"	NORMAL
			"Solw"	PAN/TILT SLOW
			"360 ", "360 "	Pan Angle 360°
		"X Angle"	"540 ", "540 "	Pan Angel 540°
			"630 ", "630 "	Pan Angel 630°
			020 ; 020	PAN/TILT optical
			"Off "	sensor testing off
		"XY Fback"	011	PAN/TILT optical
			"Open"	sensor testing on
		Return	A	Return
			_	Shortcust off for
	"Shortcut"		"Off "	colors and gobos
			011	Shortcust open for
			"Open"	colors and gobos
	"FullColr"		"Off "	half color function
	2 333 2 333		"Open"	full color function
			Орен	
	"ChanMode"		"Smal"	Simplify mode
			"Stan"	Standard mode
	"ReceMode"		"DMX "	Accept DMX
			"Wire"	Accept Wireless
			"Auto"	AutoRun
	"RunMode "			Accept other signal
			"Slve"	control
			"Musc"	Sound active
				Inside program Run
			"Auto"	automatically
	"SigClear"		"Off "	keep signal data
			"Open"	clear signal data
	DMX Reset		Off	Dmx reset not accept
			Open	Dmx reset accept
	Return		<b>A</b>	Return
			"Wink"	Lamp off
	"Default "		"Ilum"	Lamp on
			"Wink"	Lamp off by manual
	"Control "		"Ilum"	lamp on by manual
''LampSett''				Close other signal
			"Off "	control the lamp
				Open other signal
	"DmxLamp "		"Open"	control the lamp
			0000-9999	Lamp used time recorded

	"LampTime"			
			*	Password input Enter
	"ClearTim"		"Ilum"	Clear Lamp time
			"Wink"	Lamp off
	"LampStat"		"Ilum"	Lamp on
	Return		<b>A</b>	Return
	"WorkHour			working hours memo
	"		0000-9999	for connect power
	"Times		0000-9999	Open times memo
"InfoSee "	"Fan1Rota"		0000-9999	Fan rotation speed 1
Intosee	"Fan2Rota"		0000-9999	Fan rotation speed 2
	"Version "		XMOA	Version
	Spare time		No limit	No limit time
	Spare cut		No limit	No limit times
	Return		<b>A</b>	Return
"Control "			Chan 00-Chan	
Control			40	Control the Channels
	"Factory "		*	Password input Enter
			"Fold"	Recover Factory set
			"Save"	Save factory set
	"Defaults"		*	Password input Enter
			"Fold"	Recover to default
	Redress		*	Password input enter
			Reset01-10	Set the motors
			Color wheel	Channels set by
"AssiTool"	Chdefine		Rotation 001	define
115511 001				Channels set by
			000040	define
	"Brightne"		*	Password input Enter
				Open fixture time
		"TimeLimi"	0000-9999	limit
		"TimsLimi"	0000-9999	fixture times limit
				Clear the time of
		TimeCLEA	clear	used
				Clear the times of
		CutClea	clear	used
		"Passwor1"	000-255	Revise password 1

		"Passwor2"	000-255	Revise password 2
		"Passwor3"	000-255	Revise password 3
		"Passwor4"	000-255	Revise password 4
		"X Drivin"	000-255	pan main drive gear
		"X Driven"	000-255	Pan slave drive gear
		"Y Drivin"	000-255	Tilt main drive gear
		"Y Driven"	000-255	Tilt slave drive gear
		"LampPowe"	"Off "	Ballast earthed
			"total 5V",	
			"Open"	Ballast 5V
				Tilt angel rotation
		"YAngle "	000-255	set
		"Return "	000-255	return
	"Checksum	01-10"		Charle Calcillate data
	Return		<b>A</b>	Check Cabrilate data
CHANLEVE	Return		Chan1140	Show the dmx address
CHANLEVE			Colorfocus	
MotorRst	Return		Colorlocus	Display the status
All Reset"	Keturii		"Annu"	Cancel
III ICOCC			"Exec"	Reset

	PAN/tilt	"Annu"	Cancel
XY Rst	RESET	"Exec"	Reset
		"Annu"	Cancel
EffecRst	Effect reset	"Exec"	Reset
"ExitMenu"		<b>A</b>	Exit

## **10.DMX Channels**

MODE 1	MODE 2	DMX Value	Description
1	1	0-255	Pan
2	*	0-255	Pan Fine
3	2	0-255	Tilt
4	*	0-255	Tilt Fine
5	3	0-255	Pan/Tilt speed

6	4		Micro
Ţ.		0-19	Empty
		20-24	Energy-saving mode (230W)
		25-129	Empty
		130-139	Lamp on by dmx
		140-149	PAN/TILT reset
		150-159	Empty
		160-169	Small motors reset
		170-199	empty
		200-209	Whole unit reset
		210-229	empty
		230-239	Lamp off by dmx
		240-255	empty
7	5		Colors
		0-8	white
		9-17	Deep Red
		18-26	Deep blue
		27-36	Yellow
		37-45	Green
		46-54	Magenta
		55-63	Azure
		64-72	Red
		73-81	Dark green
		82-90	Amber
		91-100	blue
		101-109	orange
		110-118	СТО
		119-127	UV
		128-129	white
		Positioning	
		130-134	Deep Red
		135-138	Deep blue
		139-143	Yellow
		144-147	Green
		148-152	Magenta
		153-157	Azure
		158-161	Red
		162-166	Dark green
		167-171	Amber
		172-176	blue
		177-180	orange
		181-185	СТО
		186-189	UV

		190-215	Forwards rainbow ,speed down
		216-217	No rotation
		210 217	Backwards rainbow, speed
		218-243	up
		244-255	Random color
8	*	211200	empty
9	6		empty
	7		Static gobo
	·	0-3	empty
		4-9	Gobo 1
		10-15	Gobo 2
		16-21	Gobo 3
		22-27	Gobo 4
		28-33	Gobo 5
		34-39	Gobo 6
		40-45	Gobo 7
		46-51	Gobo 8
		52-57	Gobo 9
		58-63	Gobo 10
		64-69	Small beam 1
10		70-75	Small beam 2
10		76-87	Small beam 3
		70 07	Gobo shaking from slow to
			fast
		88-95	shaking
		96-103	Gobo 2
		104-111	Gobo 3
		112-119	Gobo 4
		120-127	Gobo 5
		128-135	Gobo 6
		136-143	Gobo 7
		144-151	Gobo 8
		152-159	Gobo 9
		160-167	Gobo 10
		168-175	Small beam 1
		176-183	Small beam 2
		184-199	Small beam 3
	_	200-255	
			Static gobo run from slow to fast
11	8	0_0	Rotate gobo
11		0-8	empty
		9-17	Gobo 1

		18-26	Gobo 2
		27-35	Gobo 3
		36-44	Gobo 4
		45-53	Gobo 5
		54-62	Gobo 6
		63-71	Gobo 7
		72-80	Gobo 8
		81-89	Gobo 9
			Gobo shaking from slow to
			fast
		90-97	Shaking ,from slow to fast
		98-106	Gobo 2
		107-115	Gobo 3
		116-124	Gobo 4
		125-133	Gobo 5
		134-142	Gobo 6
		143-151	Gobo 7
		152-160	Gobo 8
		161-169	Gobo 9
		171-179	Gobo 9 not move
		180-217	Run from fast to slow
		218-255	Run from slow to fast
	9		Gobo rotation
		0-127	index
		128-177	Run from slow to fast in anti
12		128-177	clockwise
		178-203	stop
		204-255	Run from fast to slow in
			clockwise
13	*	0-255	empty
	10		prism
14		0-19	empty
14		20-75	6 linear prism
		76-255	8 facet prism
	11		Prism rotation
		0-127	index
		128-191	Run from fast to slow in
15			clockwise
		192-194	empty
		195-255	Run from slow to fast in anti
		170 200	clockwise

16	12		Frost
		0-64	empty
		65-255	linear frost
17	13		zoom
		0-255	Linear zoom
18	*	0-255	Zoom fine
19	14	0-255	focus
20	*	0-255	Zoom fine
21	*	0-255	empty
22	15		strobe
		0-31	Strobe close
		32-63	No Strobe
		64-95	Strobe from slow to fast
		96-127	No Strobe
		128-143	Fast to slow, slow close fast
		120 143	open
		144-159	Slow to fast, fast open slow
		144 139	close
		160-191	Strobe open
		192-223	Random strobe from slow to
			fast
		224-255	No strobe
23	16		dimmer
		0-255	Linear dimmer
24	*		empty

**REMARK: WITH 2 CH MODELS**